

# MFR-8000

## セットアップガイド



### はじめに

MFR 基本システムは、次の 3 つのユニットで構成されます。

- メインユニット (以下 MU) MFR-8000
- リモコン MFR-39RU/40RU/18RU/16RU/16RUD/16RUW/32RUW/64RUW/16RUTA/39RUA/18RUA/8RUA
- PC (Web ブラウザ) Web ブラウザによる MFR システムの設定および操作

MFR システムはイーサネット LAN で接続します。出荷時に適切なネットワーク設定がされていますので、すぐに接続してご使用いただけます。システム接続前に下記のを準備してください。

#### 準備いただくもの

PC 1 台	Web ベースドコントロール用。LAN ポート付のもの。 PC の詳細については「MFR Web ベースドコントロール取扱説明書」の「2-1. 動作環境」を参照してください。	
LAN ケーブル (カテゴリ 5e 以上)	MU と PC を直結	クロスケーブル 1 本
	MU と PC をハブで接続	クロスまたはストレートケーブル 2 本 (*2)
※ 付属の LAN ケーブル (ストレート) もご利用いただけます。	MU とリモコンを直結 (*1)	クロスケーブル 1 本
	MU とリモコンをハブで接続	クロスまたはストレートケーブル 2 本 (*3)


(\*1) リダンダント CPU 使用時は不可。 (\*2) リダンダント CPU 使用時は、さらに 1 本必要  
(\*3) リダンダント CPU 使用時は、さらに 1 本必要

### 1. LAN 接続

(1) PC の IP アドレスとネットマスクを下記のように設定してください。

IP アドレス	192.168.1.XXX	XXX は 1~254 までの下記以外の数字。 10~13 (MU 出荷時設定で使用) 60~62 (MFR-TALM 出荷時設定で使用) 70~85 (MFR-RULINK 出荷時設定で使用)
ネットマスク	255.255.255.0	

- (2) MU 背面の MFR-LAN (MFR-LAN1) ポートとリモコン背面の MFR-LAN ポートを LAN ケーブルで接続します。  
※ リダンダント CPU 使用時は、必ず MFR-LAN(CPU1) と MFR-LAN(CPU2) をそれぞれ LAN 接続してください。
- (3) MU 背面の PC-LAN1 ポートと PC の LAN ポートを準備した LAN ケーブルで接続します。  
PC-LAN と MFR-LAN は別々のネットワーク(ハブ/スイッチ)に接続してください。

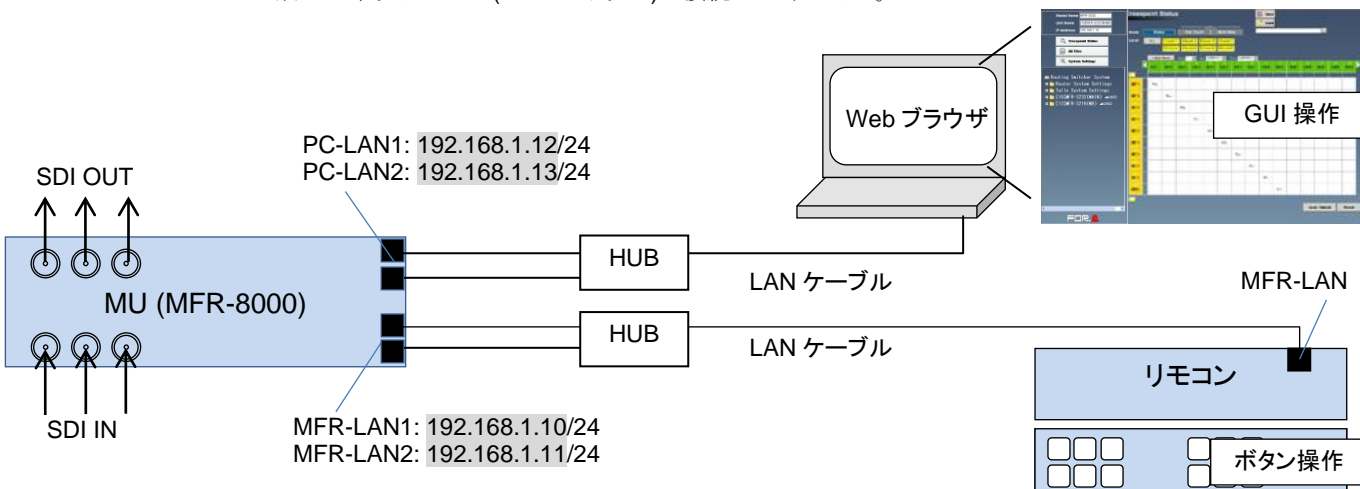

▶ 詳細については「MFR Web ベースドコントロール取扱説明書」 「2-3. ネットワーク設定」を参照してください。

### 2. 電源 ON


- (1) MU の電源ケーブルを接続し、電源を入力してください。
- (2) リモコンは付属の AC アダプタを使用して電源を入力し、電源ケーブルを抜け止め具で固定してください。
- (3) すべての機器の電源を ON にします。

### 3. Web ベースドコントロール画面を開く

- (1) PC 上で Web ブラウザを起動し、次のようにアドレスを入力して接続してください。  
**http://192.168.1.12** (MU の PC-LAN の IP アドレス)
- (2) 下記を入力してログインしてください。  
ユーザ名: **user**  
パスワード: **password**
- (3) Web ベースドコントロール画面が表示されます。

### 4. MU、リモコンの設定画面を表示する

- (1) Web ベースドコントロール画面左上の [System Settings] を押します。設定画面選択ツリーがあらわれ、接続されている MFR システムのユニットが表示されます。  
**ユニット ID:**  
ツリーには、[100]MFR-39RU、[101]MFR-18RU・・・のように機器が表示されます。[ ]内はユニット ID です。  
ユニット ID は IP アドレスの第 4 オクテットでもあります。  
この例では MFR-39RU の IP アドレスは「192.168.1.100」です。
- (2) フォルダアイコンの前の+または-をクリックによって詳細メニューの表示/非表示が可能です。  
また、詳細メニューの項目をクリックすると、右側に設定画面が表示されます。  
▶ 詳細については「MFR Web ベースドコントロール取扱説明書」「MFR-RU Series 取扱説明書」を参照してください。

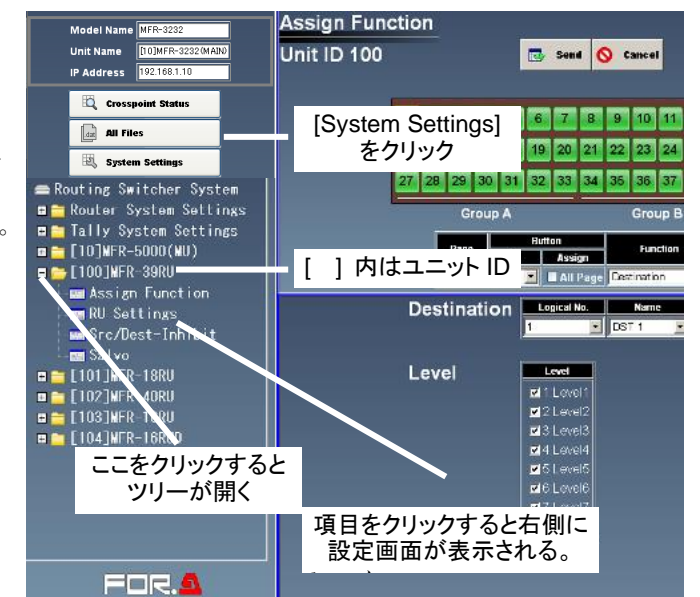

### 使用上の注意

- 指定電圧以外の電源電圧は使用しないでください。
- 必ずアースをとってください。
- 電源コードのプラグおよびコネクタはしっかりと差し込んでください。
- 内部設定を行う場合は必ず電源を切ってから操作してください。
- パネルやカバーを外したまま保管や使用しないでください。
- 高温多湿、塵埃が多い、振動がある場所などには設置しないでください。火災や感電の原因になることがあります。
- 内部に水や異物を入れないでください。万一入った場合は、すぐ電源を切り、電源コードや接続コードを抜いて内部から取り出すか、販売代理店、サービスセンターへご相談ください。
- 電源が入らない、異臭がする、異常な音が聞こえるときは、すぐに電源を切り、販売代理店、サービスセンターまでご連絡ください。

# MFR-8000

## Quick Setup Guide

### Preparation

The MFR standard system is composed of the following three hardware components.

- Main Unit** (hereafter **MU**): MFR-8000
- Remote Control Unit**: MFR-39RU/40RU/18RU/16RU/16RUD/16RUW/32RUW/64RUW/16RUTA/39RUA/18RUA/8RUA (hereafter **RU**)
- Computer (Web Browser)**: The MFR system setting and operation via a web browser

The MFR system is connected via LAN. Network settings for MFR units are properly set prior to shipment. Operation can be performed immediately upon completing the following network settings and connections. Prepare the following items in the table for the system in advance.

#### Items to prepare

Computer	For Web-based Control. A LAN port is required. Refer to section 2-1. "System Requirements" in the MFR Series Web-based Control Operation Manual" for more details.	
LAN cables (Cat5e or higher)	For MU and PC direct connection	Single cross-over cable
	For MU and PC connection via a hub	Two cross or straight cables (*2)
	For MU and RU direct connection (*1)	Single cross-over cable
	For MU and RU connection via a hub	Two cross or straight cables (*3)


(\*1) Not available if redundant CPU is configured. (\*2) Additional cable required if redundant CPU is configured.  
 (\*3) Additional cable required if redundant CPU is configured.

### 1. LAN Connection

(1) Set the PC IP address and subnet mask as shown below.

IP address	192.168.1.XXX	XXX must be from 1 to 254 except the following numbers. 10 to 13 (Used for MU) 60 to 62 (Used for MFR-TALM) 70 to 85 (Used for MFR-RULINK)
Subnet mask	255.255.255.0	

- (2) Connect the **MFR-LAN** (MFR-LAN1) port on the **MU** rear panel and **MFR-LAN** port on the **RU** rear panel using a LAN cable.
- \* Connect the **MFR-LAN(CPU1)** and **MFR-LAN(CPU2)** ports to the LAN, respectively, when the redundant CPU is configured.
- (3) Connect the **PC-LAN 1** port on the **MU** rear panel and the **PC LAN** port using a prepared LAN cable. PC-LAN and MFR-LAN must be placed in separate LAN segments (using a bridge or switch).

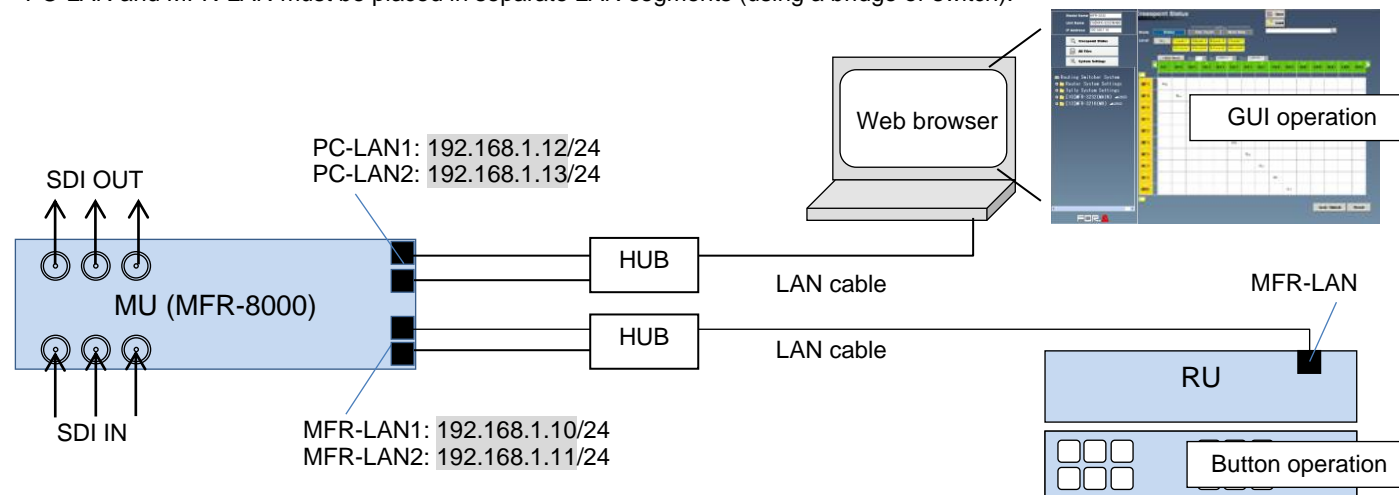

▶ Refer to section 2-3 "Network Settings" in the "MFR Series Web-based Control Operation Manual" for more details.

### 2. Power ON


- (1) Connect the power to the MU using the supplied power cord(s).
- (2) Connect the power to the RU using the supplied AC adaptor and cable. Be sure to secure the cable with the supplied cable clip.
- (3) Power on all devices in the system.

### 3. Open the Web-based Control Screen

- (1) Launch your web browser on the PC, enter the MFR MU address as shown below and connect to the MFR MU.  
**http://192.168.1.12** (IP address of MU PC-LAN)
- (2) Enter the following user name and password to login to the MFR Web-based Control.  
User name: **user**  
Password: **password**
- (3) The Web-based Control screen will appear.

### 4. Display the MU or RU Setting Page

- (1) Press [**System Settings**] in the upper left corner of the screen to display the navigation tree in the left pane, in which the MFR components in the system are displayed.  
  
**Unit ID:**  
 The current MFR system devices are displayed in the tree such as [100]MFR-39RU, [101]MFR-18RU, etc. as shown at right.  
 The number displayed in square bracket such as [100] is a **Unit ID**, which also indicates the **fourth octet of IP address**. The IP address of MFR-39RU is "192.168.1.100" in this figure example.
  - (2) Clicking on a plus or minus sign in front of a folder icon shows or hides a detailed menu tree. Clicking an item on detailed menus displays the associated setting page in the right pane.
- ▶ Refer to MFR-8000 Web-based Control Operation Manual and MFR-RU Series Operation Manual for details.

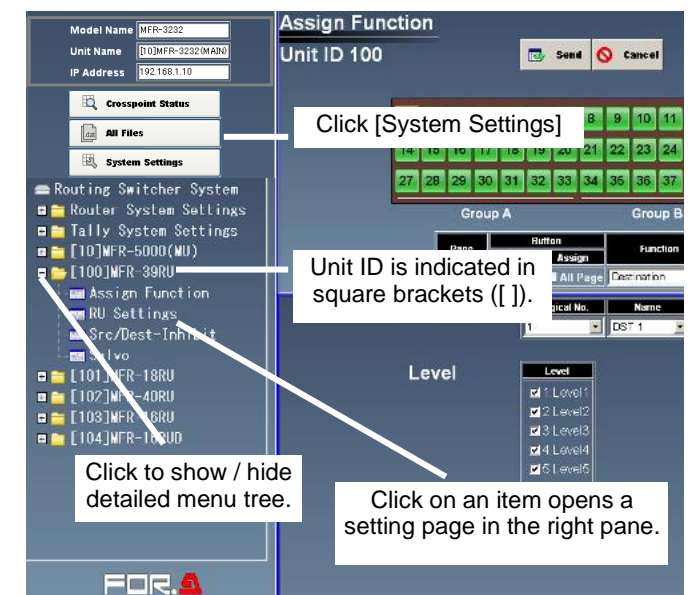

#### Precautions

- Operate the unit **only** at the specified supply voltage.
- **Ensure** the unit is properly grounded at all times.
- **Ensure** the power cord and connectors are firmly connected.
- **Do not** access circuitry with power applied to the unit.
- Unit **should not** be operated or stored with the cover, panels, and/or casing removed.
- Unit **should not** be operated or stored in a humid, dusty, etc. environment. Doing so could result in fire or electrical shock.
- **Do not** allow fluids, metal fragments, or any other foreign objects to enter the unit. If foreign matter does enter the unit, turn the power off and disconnect the power cord immediately. Remove the material or contact your authorized service representative.
- If you notice any strange smells or noises coming from the unit, turn the power off immediately, disconnect the power cord, then contact your authorized service representative.